

# POSITAL

## FRABA

ABSOLUTE IXARC ROTARY ENCODER  
WITH MODBUS/TCP INTERFACE



### User Manual

AMERICA  
FRABA Inc.  
1800 East State Street, Suite 148  
Hamilton, NJ 08609-2020, USA  
T +1-609-750-8705, F +1-609-750-8703  
[www.posital.com](http://www.posital.com), [info@posital.com](mailto:info@posital.com)

EUROPE  
FRABA GmbH  
Zeppelinstrasse 2  
D-50667 Köln, Germany  
T +49 221 96213-0, F +49 221 96213-20  
[www.posital.com](http://www.posital.com), [info@posital.eu](mailto:info@posital.eu)

ASIA  
FRABA Pte. Ltd.  
20 Kallang Avenue  
Singapore 339411, Singapore  
T +65 65148880, F +65 62711792  
[www.posital.com/sq](http://www.posital.com/sq), [info@posital.sg](mailto:info@posital.sg)

# POSITAL

---

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### Imprint

FRABA B.V.  
Jan Campertstraat 11,  
NL-6416 SG Heerlen  
T +49 221-96213-0  
info@fraba.com, [www.fraba.com](http://www.fraba.com)

#### Copyright

The company POSITAL claims copyright on this documentation. It is not allowed to modify, to extend, to hand over to a third party and to copy this documentation without written approval by the company POSITAL. Nor is any liability assumed for damages resulting from the use of the information contained herein. Further, this publication and features described herein are subject to change without notice.

#### Alteration of Specifications reserved

Technical specifications, which are described in this manual, are subject to change due to our permanent strive to improve our products.

#### Document information

File name: UME-OCD-EM  
Date: February 2016  
Version number: 1.6  
Author: Reiner Bätjer

#### Service-Phone

For technical support, questions and suggestions for improving our products and documentations call our telephone line: +49 221 96213-0

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

<b>User Manual</b> _____	<b>1</b>	5.6.2 Variables _____	18
<b>1 Introduction</b> _____	<b>4</b>	5.6.3 Encoder answers _____	20
1.1 Absolute IXARC Rotary Encoders _____	4	<b>6 Using UDP transmission</b> _____	<b>20</b>
1.2 Ethernet _____	5	<b>7 FAQ</b> _____	<b>21</b>
1.3 TCP/IP _____	5	<b>8 Glossary</b> _____	<b>24</b>
1.4 Modbus/TCP _____	5	<b>13 Revision index</b> _____	<b>25</b>
1.5 OSI-Modell _____	6		
1.6 MODBUS frame _____	6		
<b>2 Hardware Set-Up and Ethernet Connection</b> _____	<b>7</b>		
2.1 Network Topology _____	7		
2.2 Connecting an Absolute Encoder _____	8		
2.3 Ethernet Cables _____	8		
2.3.1 RJ45 – M12 crossed _____	8		
2.3.2 RJ45 – M12 straight _____	8		
2.3.3 M12 – M12 crossed _ <b>Error! Bookmark not defined.</b>			
2.4 Diagnostic LED's _____	9		
<b>3 Data transmission</b> _____	<b>10</b>		
3.1 Values _____	10		
3.2 Format _____	10		
3.3 Function code 03 _____	10		
3.4 Function code 16 _____	10		
3.5 Modbus Mapping _____	11		
<b>4 Programming</b> _____	<b>12</b>		
4.1 Programming of Parameters _____	12		
4.2 Operating by the integrated Web Server _____	13		
4.3 E-mail and Network Configuration _____	14		
<b>5 Operating by TCP/IP Commands</b> _____	<b>15</b>		
5.1 Introduction _____	15		
5.2 Installation _____	15		
5.3 PATH Variable _____	15		
5.3.1 MS-DOS, Win95, Win98, WinME _____	15		
5.3.2 WinNT3.51, WinNT4, Win2000, WinXP _____	16		
5.4 Operating _____	16		
5.5 Advanced Functionality _____	16		
5.6 Parameters _____	17		
5.6.1 Commands _____	17		

# POSITAL

---

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 1 Introduction

Absolute rotary encoders provide a definite value for every possible rotary position. All these values are reflected on one or more code discs. The beams of infrared LEDs are sent through the code discs and detected by Opto-Arrays. The output signals are electronically amplified and the resulting value is transferred to the interface.

The absolute rotary encoder has a maximum resolution of 65,536 steps per revolution (16 Bit). The Multiturn version can detect up to 16,384 revolutions (14 Bit). Therefore the largest resulting resolution is 30 Bit =  $2^{30} = 1,073,741,824$  steps. The standard Singleturn version has 13 Bit, the standard Multiturn version 25 Bit.

The encoder sends the data in binary code via standard or fast Ethernet (10 Base T, 100 Base T). At present it supports the following international standardized protocols: TCP, IP (http and SMTP in version A1), UDP and Modbus.

#### 1.1 Absolute IXARC Rotary Encoders

The encoder is able to provide three different kinds of output data: the position value, a velocity value and a time stamp. These can be use in arbitrary combinations for TCP transmitting.

The following functions of the absolute rotary encoder can be programmed directly via the Ethernet connection:

- Used scope of physical resolution
- Total scaled resolution
- Preset value
- Code sequence (Complement)

There is no specific software required for version A1 to initiate and use the absolute rotary encoder because the sensor can be read out and programmed by any standard web browser. For this purpose the absolute rotary encoder contains a web server, which provides HTML documents with embedded Java applets. These documents are a widely self-explanatory graphical user interface (GUI) that is described in detail in chapter 4.2. The automated data transfer with a control system is done with TCP/IP by simple plain text commands and data in ASCII format.

The encoder supports the communication with Modbus/TCP-PLC's and -IPC's. With function code 03 you can read out data. Function code 16 allows setting the parameters. More details see in chapter 3.4.

# POSITAL

---

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 1.2 Ethernet

The present developments in the field of Industrial Ethernet are based on the vision of an integrated access of all data of a company through a uniform communication system. In higher levels of enterprise communication Ethernet is the main medium of data transfers. Combined with other IT technologies it is internationally standardized. In the long run automation engineers will benefit from the rapid technological progress in the mass markets of IT and web technologies.

Ethernet technically provides a system with higher data transfer rates than common field bus systems. TCP/IP and UDP do have a statistical access method to access the medium thereby prohibiting determined response times. Many developments are intensely done on additional real time mechanisms, e.g. Ethernet Powerlink, Ethernet/IP, Profinet or EtherCAT. However, you can already get access times that are sufficient for many applications when using TCP/IP or UDP. If you directly connect the absolute encoder to a computer via a 100 Mbit network card, you will get a cycle time of less than 2 ms. In huge networks the cycle times will depend on the utilization of the network.

#### 1.3 TCP/IP

Even though Ethernet and TCP/IP are often used together and sometimes used interchanged, these are three different kinds of terms and you should carefully separate them. The coherences are based on the ISO/OSI reference model after ISO/IEC 7498 that is needed to basically understand these terms.

Ethernet only describes layer 1 and 2 in this model, nevertheless the term is often used in error in engineering as description of all layers between 1 and 7.

The IP protocol of layer 3 was developed in the 70's by the US military (MIL-STD 1777). It allows a universal addressing independent of the hardware involved in heterogeneous networks. It also manages the transfer of large packets by splitting them up into smaller packets. The well-known TCP protocol (MIL-STD 1778) ensures a reliable data transfer.

Http (RFC 2068) and SMTP (MIL-STD 1781) belong to layer 7 of the OSI model and allow to transfer data and documents via web browser or to send e-mails.

#### 1.4 Modbus/TCP

MODBUS is an application layer messaging protocol, positioned on level 7 of the OSI model, which provides client/server communication between devices connected on different types of buses or networks.

As an industry's standard since 1979, MODBUS continues to enable millions of automation devices to communicate. Today, support for the simple and elegant structure of MODBUS continues to grow. The Internet community can access MODBUS at a reserved system port 502 on the TCP/IP stack.

MODBUS is a request/reply protocol and offers services specified by function codes.

MODBUS function codes are elements of MODBUS request/reply PDUs. The objective of this document is to describe the function codes used within the framework of MODBUS transactions.

MODBUS is an application layer messaging protocol for clients.

For more information's see [www.modbus.org](http://www.modbus.org).

# POSITAL


## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 1.5 OSI-Modell

Layer			
7	Application Layer	Modbus	Application
6	Mapping Layer	Modbus <-> TCP	
5			
4	Transport Layer	TCP	Data transport
3	Network Layer	IP	
2	Ethernet Mac Layer	IEEE 802.3	
1	Physical Layer		Cable

#### 1.6 MODBUS frame

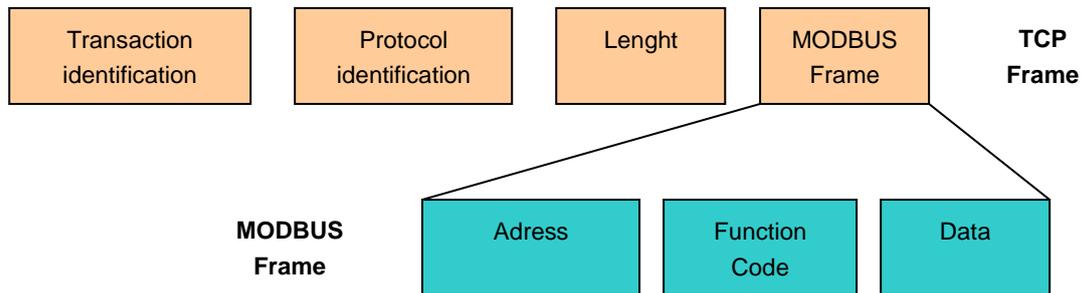

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE


## 2 Hardware Set-Up and Ethernet Connection

### 2.1 Network Topology


Using Ethernet there are different kinds of topologies possible. The connection of the encoder can be made both directly to the computer with a network card or indirectly with a switch, hub or company network, see figure below. If you use a direct connection to a computer without network components in between, you need to use a standard,

“straight” network cable (not a crossover cable). You need at least a cable of category 5 to get a data transfer rate up to 100 Mbit. If there is a network component in the network, which does not provide Fast Ethernet, the sensor will automatically switch down to 10 Mbit.

#### Connection to Switch or Hub

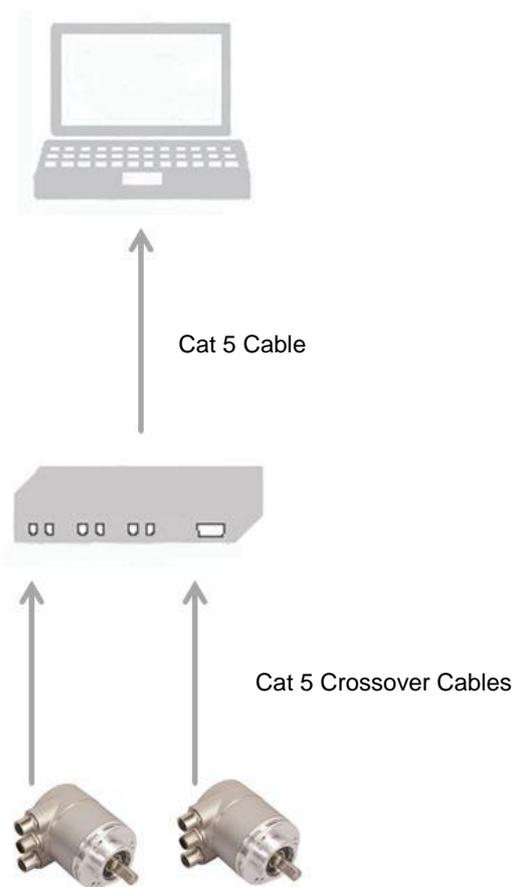

#### Direct Connection to PC

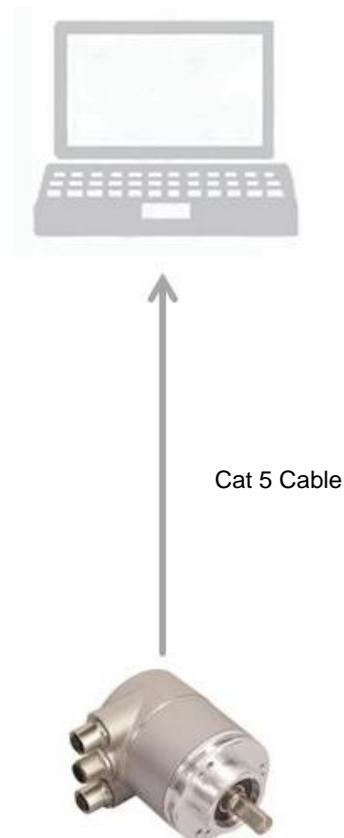

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 2.2 Connecting an Absolute Encoder

The encoder is connected by a 5 pin M12 connector for the power supply and one 4 pin, D-coded M12 connector for Ethernet.

##### Connector Ethernet

4 pin female, D-coded



Pin Number	Signal
1	Tx +
2	Rx +
3	Tx -
4	Rx -

##### Connector power supply

5 pin male, A-coded

Pin Number	Signal
1	+24 V
2	+24 V
3	0 V
4	0 V
5	PE

Sketch on encoder view

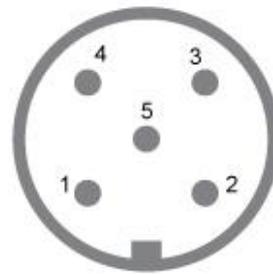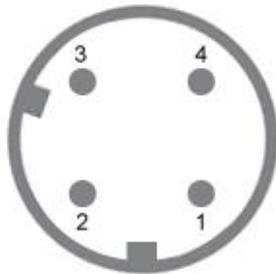

#### 2.3 Ethernet Cables

##### 2.3.1 RJ45 – M12 crossed

Signal	RJ45 Pin	M12 Pin	Signal
Tx+	1	2	Rx+
Tx-	2	4	Rx-
Rx+	3	1	Tx+
Rx-	6	3	Tx-

##### 2.3.3 M12 – M12 crossed

Signal	M12 Pin	M12 Pin	Signal
Tx+	1	2	Rx+
Tx-	3	4	Rx-
Rx+	2	1	Tx+
Rx-	4	3	Tx-

##### 2.3.2 RJ45 – M12 straight

Signal	RJ45 Pin	M12 Pin	Signal
Tx+	3	1	Tx+
Tx-	6	3	Tx-
Rx+	1	2	Rx+
Rx-	2	4	Rx-


# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 2.4 Diagnostic LED's

LED	Color	Description for LED = on
Rx1	Yellow	Incoming and outgoing traffic for port 1
Link1	Green	Link to another Ethernet component for port 1
Power	Green	Power

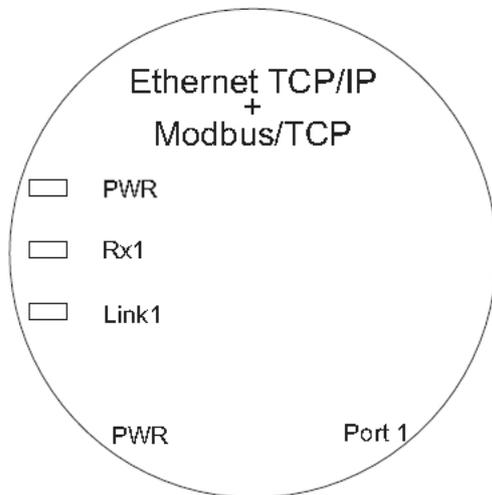

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 3 Data transmission

##### 3.1 Values

Position values, velocity and a time stamp are provided.

##### 3.2 Format

	Data type	Sign
Position	32 bit integer	unsigned
Velocity	32 bit integer	signed
Time stamp	64 bit integer	unsigned

##### 3.3 Function code 03

03 (0x03) Read Holding Registers

This function code is used to read the contents of a contiguous block of holding registers in a remote device. The Request PDU specifies the starting register address and the number of registers. In the PDU Registers are addressed starting at zero. Therefore registers numbered i.e. 1-8 are addressed as 0-7.

The register data in the response message are packed as two bytes per register, with the binary contents right justified within each byte. For each


register, the first byte contains the high order bits and the second contains the low order bits. The Error check in ADU is for Modbus/TCP not available, because TCP use a Error check. For details see [www.modbus.org](http://www.modbus.org).

##### 3.4 Function code 16

16 (0x10) Write Multiple registers

This function code is used to write a block of contiguous registers in a remote device. The requested written values are specified in the request data field. Data is packed as two bytes per register. The normal response returns the function code, starting address, and quantity of registers written.

**Please take care that under all circumstances the encoder is not turned off while it is writing to the flash!**

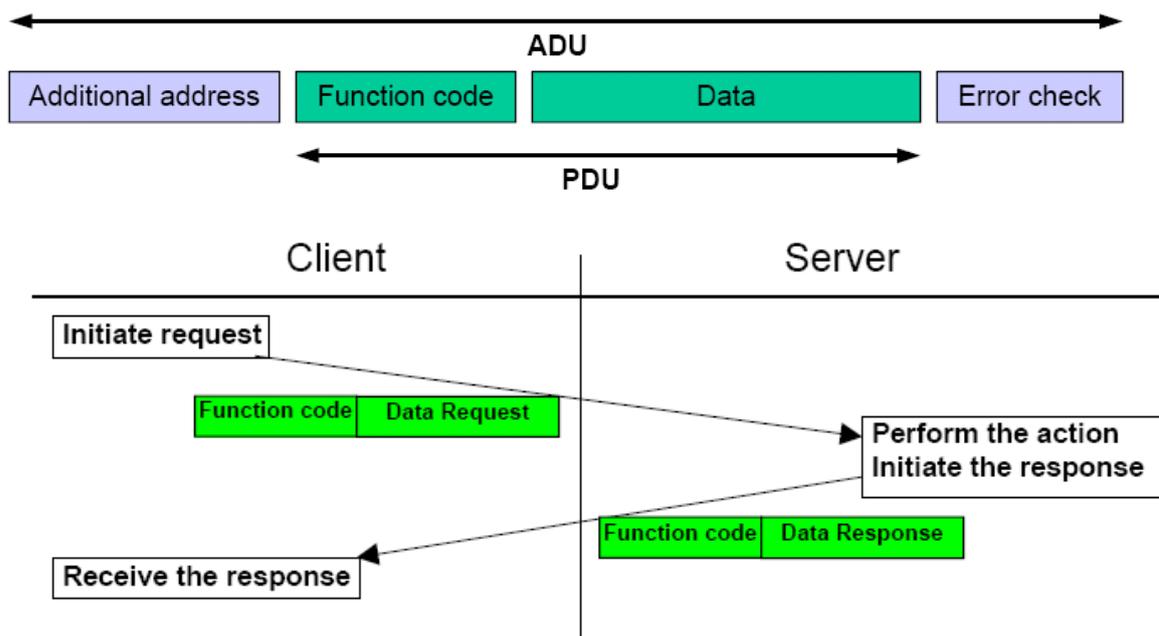

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 3.5 Modbus Mapping

Start address: 0000

Number of registers: 8

Register	Data type	Data
0	Position	Bit 17-32
1	"	Bit 1-16
2	Velocity	Bit 17-32
3	"	Bit 1-16
4	Time stamp	Bit 49-64
5	"	Bit 33-48
6	"	Bit 17-32
7	"	Bit 1-16
8	Not in use	-
9	Not in use	-
10	UsedScopeOfPhysRes	Bit 17-32
11	"	Bit 1-16
12	TotalScaledRes	Bit 17-32
13	"	Bit 1-16
14	Preset	Bit 17-32
15	"	Bit 1-16
16	Offset	Bit 17-32
17	"	Bit 1-16
18	CountingDir CW = 0 CCW = 1	Bit 1-16
19	"	Bit 17-32

Register 10 to 18 are only in use to send the parameters to the encoder.

Notify:

- The write registers will not get an update with changed parameters from the Web applet or TCP commands.
- The velocity value can be wrong during setting some parameters

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE


## 4 Programming

### 4.1 Programming of Parameters

The encoder is able to provide three different kinds of output data: the position value, a velocity value and a time stamp. These can be used in arbitrary combinations.

Parameter	Description
Used scope of physical resolution (parameter 1)	Specifies the part of the physical resolution used for the encoder in physical steps. If e.g. for an encoder with a resolution of 8192 steps per revolution 16384 is chosen, the encoder will count 8192 steps per revolution (if "Total scaled resolution" is set to the same value as "Used scope of physical resolution") and start with zero again after 2 revolutions. If this value is not set to a value which results in an integer division with the total physical resolution, the encoder value will jump to zero when passing the physical zero point.
Total scaled resolution (parameter 2)	Specifies the scaled resolution which is used over the area of physical steps defined by "Used scope of physical resolution". If e.g. the encoder is set as described above and "Total scaled resolution" is set to 10, the encoder will count 10 steps over the physical steps defined with "Used scope of physical resolution", i.e. 5 steps per revolution.
Code sequence	The code sequence (complement) can be programmed as an operating parameter. This parameter determines whether the output code increases or decreases when the axis is turned clockwise.
Preset value	The Preset value is the desired output value for the actual position of the axis. The actual output value will be set to this preset value. <b>Please note the FAQ for important information!</b>
Offset value	The offset value can set the offset to physical position of the axis.

The html page, the programmable parameters, and the diagnostics of the encoder are described in the next chapter.

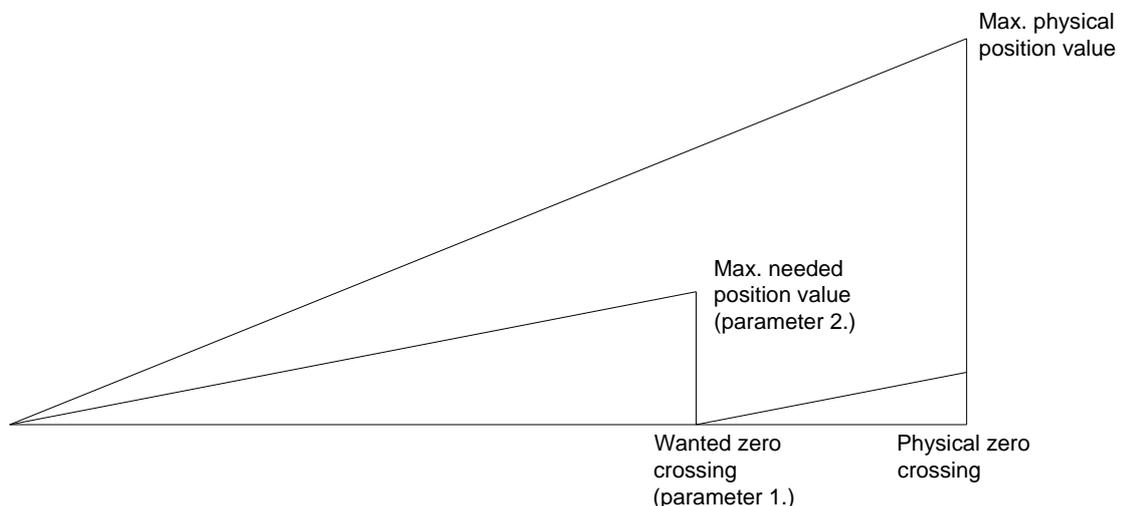

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE


#### 4.2 Operating by the integrated Web Server

The absolute rotary encoder can be addressed by any web browser (e.g. Netscape, Internet Explorer, Opera, etc.). Please enter the IP address of the encoder in the address field of the browser. The factory setting for the IP address is 10.10.10.10. Chapter 4.3 will deal with changing the IP address.

If the encoder has built up a connection to the browser, you can see its start page. To be able to parameterize the encoder

please open the page "Main Controller Site" (see image below). The other links on the starting page, will open a html page showing all available commands („Information about Commands“) or the page to configure the network settings. Chapter 5 describes these commands in more detail.

To read, for example, continuously the position values please set the desired cycle time and choose the cyclic mode. Each command to the encoder and messages from the encoder is logged in the encoder message window.

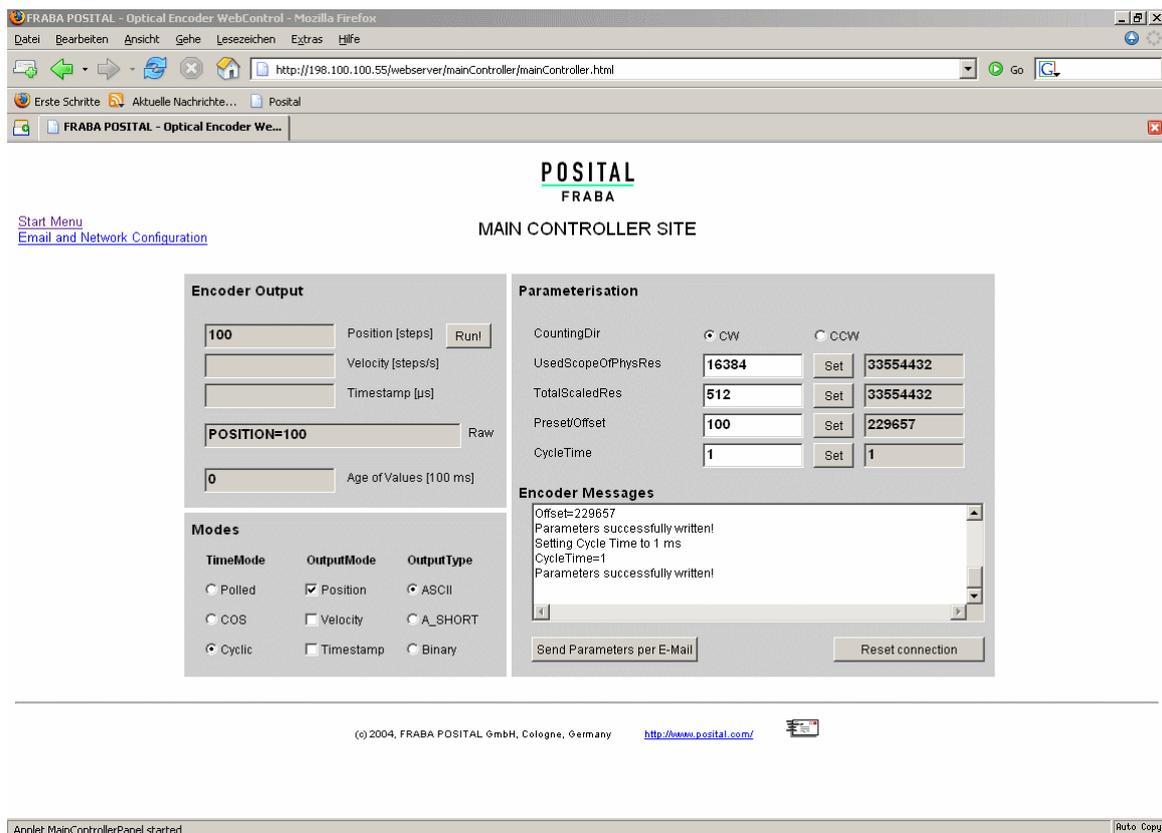


# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 4.3 E-mail and Network Configuration

The rotary encoder can be used either with the wired IP 10.10.10.10 or the software IP address which can be programmed. A switch to choose either option is located in the connection cap. If the switch 2 is in position "off", the programmable IP has been chosen. Both Hex rotary switches and switch 1 are not in use for this encoder. The configuration window can be accessed via the "Main Controller Site" or the start page.

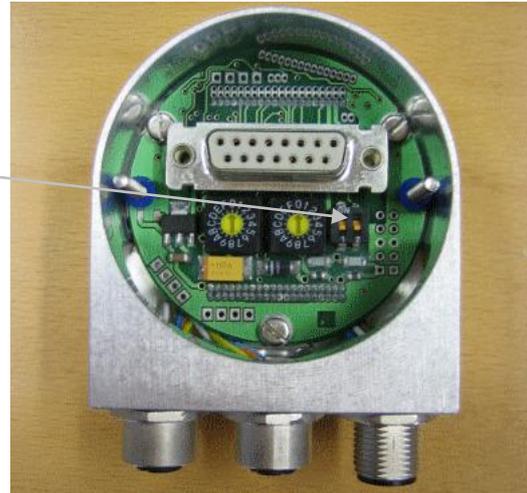

FRABA POSITAL - Optical Encoder WebControl - Mozilla Firefox

http://198.100.100.55/webserver/networkConfig/networkConfig.html

Start Menu  
Main Controller Site

**POSITAL**  
FRABA

E-MAIL AND NETWORK CONFIGURATION

**Network - Configuration**

Encoder IP Address: 198.100.100.55 [Set]  
Encoder Netmask: 0.0.0.0 [Set]  
Gateway IP Address: 198.100.100.30 [Set]

**E-Mail - Configuration**

SMTP-Server IP: 217.69.67.146 [Set]  
Mail Sender: encoder@posital.de [Set]  
Recipient Address: bauten@posital.de [Set]

[Send Test E-Mail]  
[Send Parameters per E-Mail]  
[Reset connection]

(c) 2004, FRABA POSITAL GmbH, Cologne, Germany <http://www.posital.com/>

Applet NetworkConfigPanel started [Auto Copy ENABLED]

# POSITAL


## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

## 5 Operating by TCP/IP Commands

### 5.1 Introduction

To use the absolute encoder with a control system platform independent commands and data in ASCII format can be exchanged by TCP/IP. To take a look at the commands and a short description please see chapter 5.6. To find out how to address the TCP/IP interface of your control or operating system please refer to the documentation for these devices

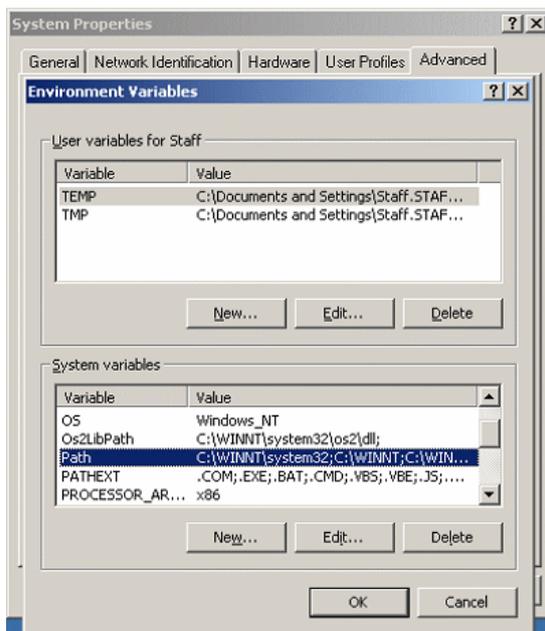

If you use a Windows PC, you can try the following connection to the sensor: Go to the command prompt (DOS) and type in "ping <computer-name>" or "ipconfig". In response you get the IP address of your computer. If the encoder IP address is not located within your subnet mask, you will need to prepare the data transfer to the encoder by entering the command "route add <IP-sensor> <IP-computer>". Maybe are administrator rights necessary. Otherwise your PC/control system will try to reach the encoder via your computers

standard gateway. The default IP address of the sensor is 10.10.10.10. You can check the connection to the sensor with the command "ping <IP-sensor>".

### 5.2 Installation

To communicate with the Encoder using our example tools tcpcl or updcl, a Java runtime environment is required on your PC. If you have not installed Java, you can get it from our CD (look under the section "accessories"). You can also download the latest version from <http://java.sun.com/products/j2se>. Copy the FRABA-Java programs which you can find on our website

[https://www.posita.com/media/fraba/productfinder/posita/tools-ixarc-ocd-em-java\\_client.zip](https://www.posita.com/media/fraba/productfinder/posita/tools-ixarc-ocd-em-java_client.zip) onto your hard disk, e.g. in the folder c:\fraba\ethernet.

Afterwards you need to set up the PATH variable for the Java installation and the FRABA-Java programs. For a convenient start we also provided batch files to start the java files, depending on the IP addresses you might need to modify them. For TCP will be used port 6000.

### 5.3 PATH Variable

#### 5.3.1 MS-DOS, Win95, Win98, WinME

Please add the required paths to c:\Autoexec.bat behind the "Path" line. Example:

```
Path=c:\ms-dos; c:\Program Files\BC\BIN
Path=%Path%;c:\fraba\ethernet\
Path=%Path%;c:\programme\java\bin
```

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 5.3.2 WinNT3.51, WinNT4, Win2000, WinXP

In Start – Settings – Control panel – System – Advanced – Environment Variables you can configure the variable “Path”. Please **do not change** the **other path settings**, but only add the

required paths! Depending on the operating system used administrator rights might be necessary.


#### 5.4 Operating

After starting the batch file dos10.bat in tools-ixarc-ocd-em-java\_client.zip (subdirectory TCP/IP+UDP-Client\TCPClient\_Posital\_Time\ the connection to the encoder with IP-Address 10.10.10.10 will be built up. IF you need another IP-Address then you can change the batch file. Once you are connected, you can try e.g. “read offset” (please note space) to read out the

calculated offset from the encoder. You can see all available commands in the next chapter.

If the encoder is running in cyclic mode, you can see position values coming continuously from the encoder. You can enter a command anyway, although your input will be overwritten by new position values, the command will still be sent once you press enter.

The Java program can be finished with CTRL-C.

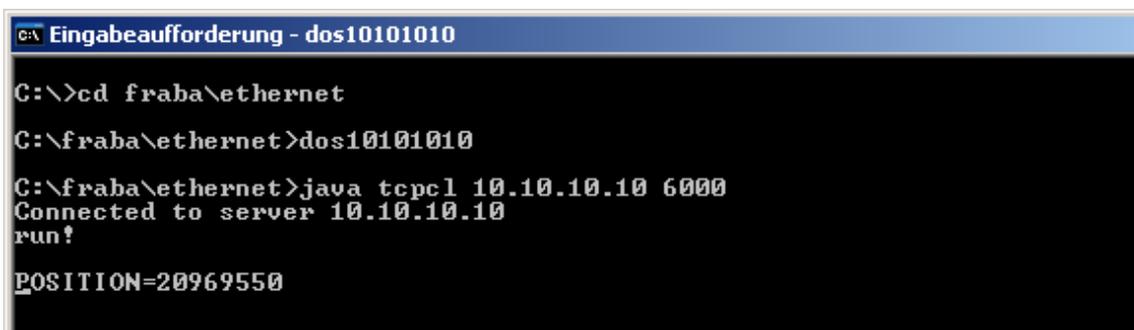

```
C:\> Eingabeaufforderung - dos10101010
C:\> cd fraba\ethernet
C:\fraba\ethernet> dos10101010
C:\fraba\ethernet> java tcpcl 10.10.10.10 6000
Connected to server 10.10.10.10
run!
POSITION=20969550
```

#### 5.5 Advanced Functionality

In the subdirectory "advanced" in the Zip-file “Software Tools” there is a version of the TCP-client with enhanced functionality:

- the time from the command till the encoder issues an answer can be measured in steps of 10 ms. This can be switched on/off using time / notime.
- the binary values transmitted by the encoder can be transferred to ASCII again, if it does

not contain ‘\0’ or ‘\n’. This can be switched by binary / ASCII, it will be automatically switched when the encoder is switched from/to binary mode.

- Scrolling of the output can be turned on/off via scroll / noscroll
- 'new' renews the connection to the encoder
- 'exit' will close the TCPClient application

# POSITAL

---

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 5.6 Parameters

##### 5.6.1 Commands

**Important:** Please note spaces, upper and lower case! **<Value>** means the parameter to enter. All commands and parameters have to be entered in one line and started with **<ENTER>**.

“Value“ means the output value. You can change and read the settings of the encoder by using the following commands:

Commands	Remarks
Run!	This command will order the encoder to send a position value, regardless of the time mode.
set <Variable>=<Value>	<p>This command will set a variable to a given value. If successful, the encoder will answer in the form &lt;Variable&gt;=&lt;Value&gt;, else an error message will be issued. All variables/modes are stored in the internal flash a few seconds after they were set.</p> <p>After the value was saved, the message "Parameters successfully written!" is issued to all connected TCP-Clients. If the encoder is turned off while writing to the flash, the process can damage the flash and destroy the encoder program.</p> <p><b>Please take care that under all circumstances the encoder is not turned off while it is writing to the flash!</b></p>
read <Variable>	This command will read out a variable from the encoder. The encoder will answer in the form <Variable>=<Value>.

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 5.6.2 Variables

Variables	Remarks / Values
UsedScopeOfPhysRes	Specifies the part of the physical resolution used for the encoder in physical steps. If e.g. for an encoder with a resolution of 8192 steps per revolution 16384 is chosen, the encoder will count 8192 steps per revolution (if TotalScaledRes is set to the same value as UsedScopeOfPhysRes) and start with zero again after 2 revolutions. If this value is not set to a value which results in an integer division with the total physical resolution, the encoder value will jump to zero when passing the physical zero point. Default value: Physical resolution of the type label. I.e. 4096 resolutions x 8192 steps per revolution = 33,554,432
TotalScaledRes	Specifies the scaled resolution which is used over the area of physical steps defined by UsedScopeOfPhysRes. If e.g. the encoder is set as described above and TotalScaledRes is set to 10, the encoder will count 10 steps over the physical steps defined with UsedScopeOfPhysRes, i.e. 5 steps per revolution. Default value: Physical resolution of the type label. I.e. 4096 resolutions x 8192 steps per revolution = 33,554,432
CountingDir	Specifies the direction to turn the axis which is associated with higher values. <ul style="list-style-type: none"> <li>• <b>CW</b>: denotes that clockwise turning will increase the position value</li> <li>• <b>CCW</b>: denotes that counterclockwise turning will increase the position value</li> </ul>
Preset	When the preset is set, an internal offset will be calculated, which will be saved and added to all position values afterwards. The value given for the preset denotes the position value the encoder will show at the point where the preset was set. <b>Please note the FAQ for important information!</b>
Offset	This variable makes it possible to directly change the offset calculated and set by the preset function.
TimeMode	Possible time modes are: <ul style="list-style-type: none"> <li>• <b>Polled</b>: Encoder will only send output values if asked to do by "Run!"</li> <li>• <b>Cyclic</b>: Encoder will send output values after time specified by CycleTime.</li> <li>• <b>Change of state</b>: The Encoder will send the output values only if either the position or the velocity has changed. The values are checked every 5 ms to reduce unwanted network traffic</li> </ul>

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

Variables	Remarks / Values
OutputMode	<p>Possible output modes are: [Position_][Velocity_][Timestamp_] where the components mean:</p> <ul style="list-style-type: none"> <li>• <b>Position:</b> Encoder will send a scaled Position value.</li> <li>• <b>Velocity:</b> Encoder will send a velocity Value (steps/s).</li> <li>• <b>Timestamp:</b> Encoder will send a timestamp in microseconds, starting with 0 at the startup of the encoder. As the counter is a 32 Bit value, the timestamp will reach zero again after approx. 1.2 hours. This variable has got no effect to the Modbus communication.</li> </ul>
OutputType	<p>Possible output types are:</p> <ul style="list-style-type: none"> <li>• <b>ASCII:</b> Encoder will send ASCII-letters in the form "POSITION=&lt;POSITION&gt; VELOCITY=&lt;VELOCITY&gt; TIMESTAMP=&lt;TIME&gt;"</li> <li>• <b>ASCII_SHORT:</b> Encoder will send ASCII-numbers in the form "&lt;POSITION&gt; &lt;VELOCITY&gt; &lt;TIME&gt;", separated by spaces</li> <li>• <b>BINARY:</b> Encoder will send 32 bit binary values without any separator between the values.</li> </ul> <p>This variable has got no effect to the Modbus communication.</p>
CycleTime	<p>States the time in ms for the cyclic time mode. Can have values between 1 ms and 999,999 ms. This variable has got no effect to the Modbus communication.</p>
IP	<p>Sets the IP-address of the encoder and must be a valid IP-address in the form a.b.c.d, with a, b, c, d from 0 to 255.</p> <p><b>Attention: The IP-address will only be activated after a new power-up when switch 2 is in position "off".</b></p>
NetMask	<p>The net mask used by the encoder. Please take care that Encoder and PLC/PC are within the same subnet or specify a working gateway.</p>
Gateway	<p>Gateway to be used by the encoder, if own IP-address and destination IP-address are not within the same subnet specified by the net mask.</p>
OwnEmailAddr	<p>The email-address given as the sender in emails from the encoder.</p>
RmtEmailAddr	<p>The email address emails will be send to.</p>
SMTPServerIP	<p>The IP-address of the SMTP-server which the encoder will send the email by.</p>
Verbose	<p>Level of information output for tracer (0 = only errors, 1 = errors and warnings, 2 = errors, warnings and clues)</p>
AutoArpCacheUpdate	<p>Arp Cache will get an update rarely. For Hot-Plug-Swap applications the Auto Arp Cache Update can be activate. 1=On, 0=Off (default)</p>

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 5.6.3 Encoder answers

Encoder answers	Remarks
<Variable>=<Value>	If a variable was correctly set, the encoder will answer to all connected TCP-clients with the variable and its new value. This indicates that the Encoder understood the command and now uses the value, it does not indicate that the value was already save to the internal Flash, please allow some additional seconds for that.
ERROR: ...	If something went wrong, the encoder will issue an error, e.g. if it did not understand a command or if a value for a variable was not correct. It will describe the error after the "ERROR:" tag.
WARNING: ...	If a variable was set to a value, which is permitted, but which may result in problems when certain conditions occur, the encoder will issue a warning. This could for example happen, if the variable UsedScopeOfPhysRes is set to a value which does not result in an integer division with the physical resolution of the encoder when dividing the total physical resolution of the encoder. The reason for the warning will be sent following the "WARNING:" tag.
<b>Parameters successfully written!</b>	<b>If any variable was set, it is important to wait until the encoder displays this message before the encoder can be turned off, otherwise the internal flash might be damaged.</b>

## 6 Using UDP transmission

After starting the batch file "UDP\_10101010.bat", which will start a UDP client on the PC and connect to the encoder, "run!" can be entered to read out the position value. As UDP is not connection oriented as TCP is, only the POLLED mode is supported using UDP; encoder values

cyclically send will not be received by UDP clients.

The parameterization of the encoder can only be changed by TCP-commands (see chapter 5). As UDP is not connection orientated. The encoder allows UDP-connections to port 5000 only.

```
C:\Eingabeaufforderung - UDP_10101010
C:\>cd fraba\ethernet
C:\fraba\ethernet>UDP_10101010
C:\fraba\ethernet>java udpcl 10.10.10.10 5000
Local UDP socket opened: will send to server 10.10.10.10 on port 5000
run!
POSITION=20969550
```

# POSITAL

---

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 7 FAQ

1. **Question:** Why cannot set the Preset value more than one time?  
**Answer:** The Preset value will save in the flash of the encoder. This flash has only writing cycles of 100000 times. If the register 14+15 is in use to set the Preset value it could be that thousands of cycles will save in the flash and the life time of the encoder decrease significant. So we fix it that it is not possible to save the same preset value for more than one time. The next preset value must be different, but can use in the next but one. I.e. Preset value is 0. Then set in the first time 0, in the second 1, in the next one 0, ...
2. **Question:** With which PLC can the encoder work too?  
**Answer:** SEND/RECEIVE is an easy open protocol, that can be used by different PLC's like Siemens (S7-1200), Hima, ...
3. **Question:** Physical zero point problems  
**Answer:** You can set only the Preset value. The offset value is only the result. If you would like to set the encoder position to the half of physical resolution you have to do the following steps:

  - a. Set preset value to a value so that the offset value is zero.
  - b. Rotate the shaft i.e. to 16777216
  - c. Set the Preset value to the wished value.
4. **Question:** Minimum sensor update time  
**Answer:** The internal sensor update time amounts ~2 ms. Temporary the update time was between Version 4.2 and 4.5 only 10 ms. But this fast transmission time is only possible with UDP. According the basic of TCP-IP and the network traffic this product cannot guarantee real time applications.
5. **Question:** How to use a redundant PLC?  
**Answer:** If the encoder should work on a Hot-Plug-Swap application it is necessary to activate the Auto Arp Cache update. Send to the encoder Set AutoArpCacheUpdate=1  
But please note that this decrease the response time.
6. **Question:** Compatibility to OCD-ETA1B-...  
**Answer:** OCD-EM... is the 1:1 replacement.


# POSITAL

## FRABA


### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

7. **Question:** Web applet doesn't open and an error message comes up

**Answer:** Open Java console to see Java error messages under  
Start - Control Panel - Java (Windows 7):

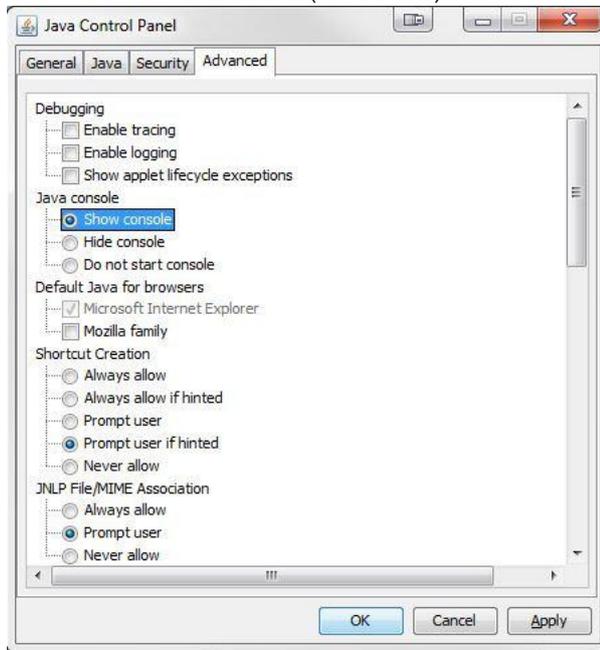


In newer Java versions ~>7 Update 16 there are problems with the Certificates. But it is possible to put the device on a white list:

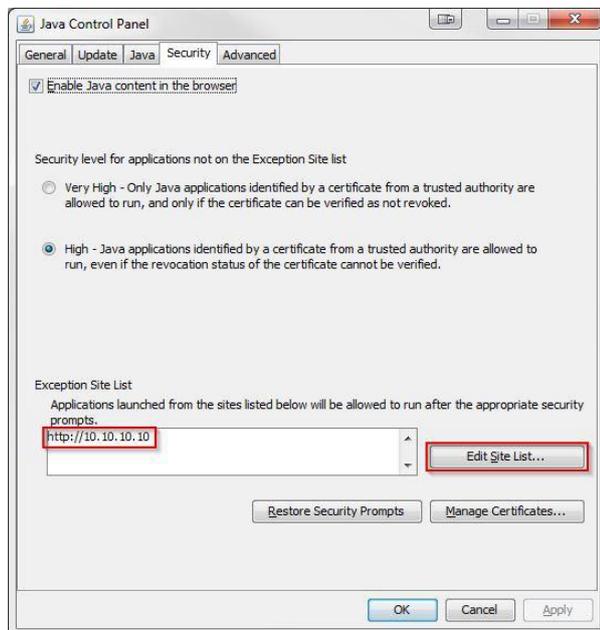

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

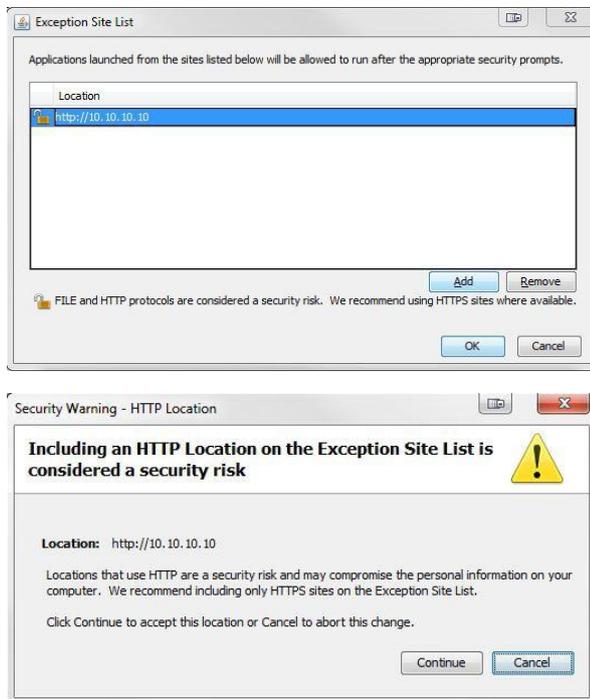

Hint: With Internet Explorer and Google Chrome there should be a problem after switching to another page. But with Firefox this works stable.

- 8. Question:** Error message "Exception while opening stream with IP..."
- Answer:** Based on the security rules of Java 7 Update 16 this problem comes up based on the Java configuration. Here are several solutions:
- a.) Allow i.e. for IP address 10.10.10.10 c:\Program Files\Java\jre1.8.0\_40\lib\security\java.policy to open TCP/IP connections:  

```
grant codeBase "http://10.10.10.10/webserver/" {  
    permission java.net.SocketPermission "*", "listen.connect.accept.resolve";  
    permission java.security.AllPermission;  
};
```

*/\* - at the end of the URLs means all files in this directory and subdirectories.*
  - b.) Use an older JAVA version. But it could be that this is not allowed from you IT administration!
  - c.) In the most cases our customers use the web-applet only for the configuration. Temporary they can use the JAVA tool from our website. See details in chapter 5.4. Then they can send the commands with command line input. See chapter 5.6.

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

#### 8 Glossary

Term	Explanation
10 Base T	Transmission line with 10 Mbit data transmission rate
100 Base T	Transmission line with 100 Mbit data transmission rate
ADU	<b>A</b> pplication <b>D</b> ata <b>U</b> nit
ASCII	<b>A</b> merican <b>S</b> tandard <b>C</b> ode for <b>I</b> nformation <b>I</b> nterchange ASCII describes as code the correlation from digital integers to a normal font described character.
Batch file	Script program for MS-DOS
Baud rate	Transmission rate; it display the transmission bits per second
Binary	Numeric system with value 0 or 1.
Browser	Software program to display HTML-Sides on different operating systems (Linux, Unix, Windows, ...)
CAT5	Terminations for transmission rates up to 100 Mbit.
CRC	The cyclic redundancy check is a method from the information technology to control a checksum for data, to reduce errors by the transmission.
EMC	<b>E</b> lectromagnetic compatibility, there are rules to verifying devices.
Ethernet	Ethernet is a computer network technology based on frames.
Fast Ethernet	Transmission technology with 100 Mbit transmission rate.
FCS-Bytes	The <b>F</b> rame <b>C</b> heck <b>S</b> equenz-Bytes are a 32 Bit CRC-Checksum.
Flash	Internal memory, saved data will be available after power down.
HTML	The <b>H</b> ypertext <b>M</b> arkup <b>L</b> anguage is a document format used in the World Wide Web to be displayed by a browser
HTTP	The <b>H</b> ypertext <b>T</b> ransfer <b>P</b> rotocol is a stateless transmission protocol for data transmission.
Hub	The hub connects different network segments e.g. in an Ethernet network.
IP-Address	IP-address allows a logic addressing from computer in a network.
IP-Protocol	The <b>I</b> nternet <b>P</b> rotocol is widespread in computer networks. It is the implementation of the internet layer of the TCP/IP-model
MODBUS	Is an application layer messaging protocol, positioned at level 7 of the OSI model, which provides client/server communication between devices connected on different types of buses or networks
MODBUS/TCP	The Internet community can access MODBUS at a reserved system port 502 on the TCP/IP stack.
Mbit	Transmission rate or baud rate, million bits per second
OCD	Acronym: <b>O</b> PTOCODE, name of an encoder series manufactured by FRABA POSITAL.
OSI-Model	The <b>O</b> pen <b>S</b> ystem <b>I</b> nterconnection reference model is a open layer model for the organization of a communication.
PDU	<b>P</b> rotocol <b>D</b> ata <b>U</b> nit
PPP-Packet	The <b>P</b> oint-to- <b>P</b> oint <b>P</b> rotocol will be need for a connection establishment. It enables the transmission between different network protocols.

# POSITAL

## FRABA

### ABSOLUTE IXARC ROTARY ENCODER WITH MODBUS/TCP INTERFACE

SMTP	<b>S</b> imple <b>M</b> ail <b>T</b> ransfer <b>P</b> rotocol managed the transmission of e-mails.
Switch	A switch is an electronic device to connect computers e.g. network segments in a local network. Unlike a hub, a switch uses stacks to avoid network collisions.
TCP	The <b>T</b> ransmission <b>C</b> ontrol <b>P</b> rotocol is a connection orientated transmission protocol, in a network.
TCP-Client	MS-DOS program available from FRABA to communicate with the encoder.
UDP	<b>U</b> ser <b>D</b> atagram <b>P</b> rotocol is utilized to send data that does not need to be transferred in a reliable way.

### 13 Revision index

Revision	Date	Revision
Delete technical drawings + type key + accessories Changed table background from grey to transparent Update Label and LED table Add FAQ (Preset + Delete Arp Cache, ...)	2015-02-18	1.3
Add hint for FAQ 7 that Firefox works without problem	2015-05-20	1.4
Add FAQ 8: Error message "Exception while opening stream with IP..."	2015-12-17	1.5
Update FAQ 8 to a secure IT solution and add explanation to Java tool Address modifications and small spelling corrections	2016-02-08	1.6

#### Disclaimer

© FRABA B.V., All rights reserved. We do not assume responsibility for technical inaccuracies or omissions. Specifications are subject to change without notice.